



# Canon PowerShot SX260 HS Battery Replacement

During this how to guide we will be showing users how to replace the battery in their Canon PowerShot SX260\_HS

Written By: Tyler Kelch



## Step 1 — Battery



- With the device fully assembled, hold the camera with both hands with the bottom of the camera facing toward you.

## Step 2



- Place your right thumb on the sliding panel that is marked Card/Battery
- Slide the panel to your right and you will hear a slight click. This is normal and you did not damage the device.

## Step 3



- Remove your thumb from the Card/Battery panel and lift the panel 90 degrees.
- The battery will eject slightly by the force of a spring.
- Remove the battery and replace.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-07-06 08:53:17 PM.